

Internet-Enabled Digital Frame



User Manual

Content

I. Package Content	3
II. Learn about Internet-enabled Digital Frame	3
<i>Overview</i>	3
<i>Specifications</i>	3
<i>Computer System Requirements</i>	4
<i>Photo Frame Layout</i>	4
III. Prepare Your Device for Use	4
<i>Charge battery for Digital Frame</i>	4
IV. Start Your Digital Frame	5
<i>Turn ON/OFF</i>	5
<i>About Setup Menu</i>	6
<i>Viewing Your Photos</i>	6
<i>Set Auto Sleep</i>	6
<i>Set Alarm</i>	7
<i>Set Languages</i>	7
V. Send Photos to Digital Frame	8
<i>Connect to PC</i>	8
<i>Software Installation</i>	8
<i>Run Digital Frame Driver</i>	9
<i>Downloading Photo onto Photo Frame</i>	11
<i>Deleting Photo from Photo Frame</i>	12
<i>Disconnect Digital Frame from PC</i>	12
VI. Weather Report & Online Album & Events Reminder	12
<i>Weather Report</i>	12
<i>Online Album Slideshow</i>	14
<i>Direct Show Photos on Your PC</i>	17
<i>Google Calendar Events Reminders</i>	17
VII. FAQ	19

I. Package Content

Check that all the accessories are included before using the Internet-Enabled Digital Frame.

Digital Frame	USB Cable	CD (Driver and Manual)	Holder	Strap	Quick Start Guide
					

If any accessories are lost, please contact local dealer for further information about obtaining replacement parts

II. Learn about Internet-Enabled Digital Frame

Overview

This Internet-Enabled Digital Frame revolutionizes photo sharing and goes beyond just showing pictures. Integrated with Flickr and Google Calendar, the Digital Frame could show online album and remind Google Calendar events. Designed for life, it can also direct show latest worldwide weather report. Stylish and smart, the Digital Frame is perfect for your home and office.

Key Features:

- | Dual use mode: for portable and desktop
- | Display up-to-date worldwide weather report
- | Flickr integration: display online albums without opening IE
- | Google Calendar integration: event reminders
- | Direct show pictures in local folder of PC
- | Auto screen turn-off
- | Slideshow mode in transition effects
- | Multilanguage: English, Spanish, German, Italian and French
- | Alarm clock

Specifications

LCD	2.4" TFT screen (320*240 pixels, 64K color)
Memory	Internal 16MB memory
Photo Capacity	28 photos
Image Format Support	JPG, BMP, PNG and GIF
USB Port	2.0
Battery	Built-in rechargeable Li-Ion battery
Battery work duration	Over 4 hours
Power source:	Built in Li-Ion battery or USB supply

Control buttons:	Next, Prev and Menu
Software	Digital Frame Driver
Dimension	80 x 53 x 12mm
Certificate	CE, FCC, RoHS

Computer System Requirements

To be able to download photos from your PC you will need the following minimum configuration:

- ✓ Windows 98, ME, 2000, NT, XP and Vista
- ✓ Pentium 400MHz above processor
- ✓ 16 MB hard disk free space and 128 MB or more RAM
- ✓ Available USB Port
- ✓ CD-ROM Driver

Photo Frame Layout



- ① LCD
- ② USB Port
- ③ Strap-eye
- ④ Power Switch
- ⑤ UP button
- ⑥ Down button
- ⑦ Menu button / OK button / Start button

Note: The Digital Frame would start by extended pressing

III. Prepare Your Device for Use

Charge Your Photo Frame

The battery indication is displayed on the LCD. It would display  when the battery is running low and display  when charge is completed. Please charge the battery by USB power from your computer.



USB Power: charge the frame with power indicator displayed. Meanwhile, it could show photos in memory during charge process

USB Update: connect the frame with PC to realize weather report, event reminders, online album and photos management

Note:

- ① Take care not to turn off Power Switch button during charging

IV. Start Your Internet-Enabled Digital Frame

Turning On/Off

Cold Start: For the initial use, switch the Power button to “ON” to turn on Digital Frame.


 
Warm Start: When Power button being switched to ON, press and hold **M** for 2 seconds to start the device. It’s recommended to turn on Digital Frame by warm Start

Cold Close-down: Switch the Power button to “OFF”. It’s recommended not to cold close-down your Digital Frame unless it would not be in use for long period. (Refer to Note)

Warm Close-down: press Menu button **M** to access the SETUP menu; then refer to following instructions to finish setting:

1. Select “Power Off” by pressing **M**.

2. Select “Yes” by pressing **M**

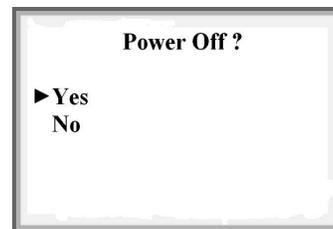

Note:

When Power button being switched to “OFF”, the Digital Frame would power off and all the function settings (eg. time, alarm, language and auto sleep. etc.) have been reset to default settings.

About SETUP Menu


All the function settings for the Internet-Enabled Digital Frame are controlled via the buttons located on top of the Frame. Press the **M** button to enter SETUP menu and refer to following Menu table before setting your Digital Frame

Menu Items	Sub-Menus	Description
Photo Frame	Auto Scroll	Slide show mode
	Manual Scroll	View one image at a time
Auto Sleep	Off	Enable or disable the timer
	30 Seconds	
	1 Minute	
	3 Minutes	
	5 Minutes	

Alarm	Alarm Off	Alarm off and back to Menu
	Alarm On	Enable and set alarm
Power Off	Yes	Turn the Frame off
	No	Back to Menu
Languages	English	Select desired language
	French	
	German	
	Italian	
	Spanish	
Exit		Back to continue viewing photo

Viewing Your Photos

The Digital Frame would display your photos once powers up. Press **M** to access SETUP menu.

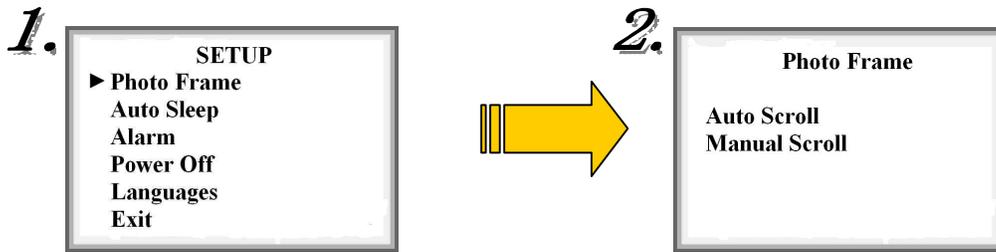

Auto Scroll: Photos will advance automatically


Manual Scroll: Photos will be displayed manually by pressing ◀◀ / ▶▶

Note:

- ① In Auto Scroll mode, the ◀◀ / ▶▶ is available too.
- ② In Auto Scroll mode, Photo Frame may power off due to the activated Auto Sleep function (Refer to Setting Auto Sleep)

Setting Auto Sleep

This would turn off Digital Frame automatically when not in use to save power and protect screen

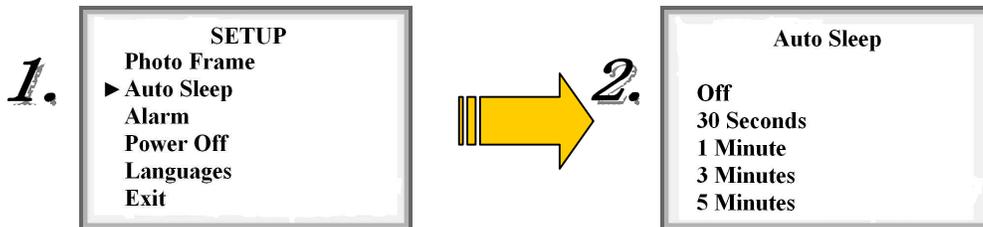


Off: Disable Auto Sleep function

30 Seconds / 1 Minute / 3 Minutes / 5 Minutes: Photo Frame would be turned off if there is no operation during the time selected on the setting.

Notes:

- ① It's recommended to turn off Auto Sleep function during photos slideshow.
- ② The Digital Frame would be on automatically when alarm rings (Refer to Setting Alarm)

Setting Alarm

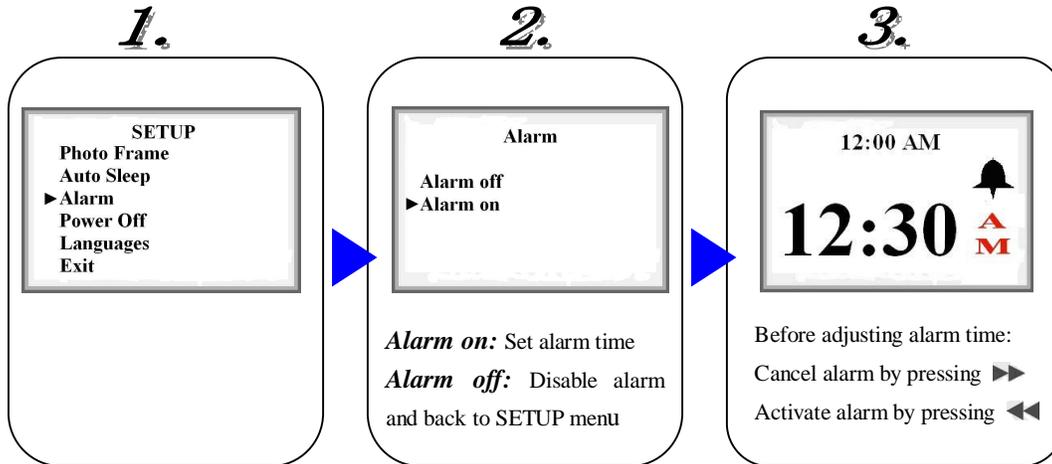

Adjust alarm time


- Press **M** once to set hour
- Press ◀◀ / ▶▶ to adjust hour
- Press **M** again to set minute
- Press ◀◀ / ▶▶ to adjust minute
- Press **M** to finish alarm setting and back to SETUP menu

Notes:

- ① Alarm would last 1 minute. Stop alarm by pressing any button when it rings
- ② The alarm is available unless Power button being switched to "OFF".
- ③ Clock time would auto synchronize with your PC when connecting to PC
- ④ Auto on: when alarm rings, the Digital Frame would start-up automatically

Setting Languages

Languages Setting allows your Digital Frame displaying multi-language provided on the screen

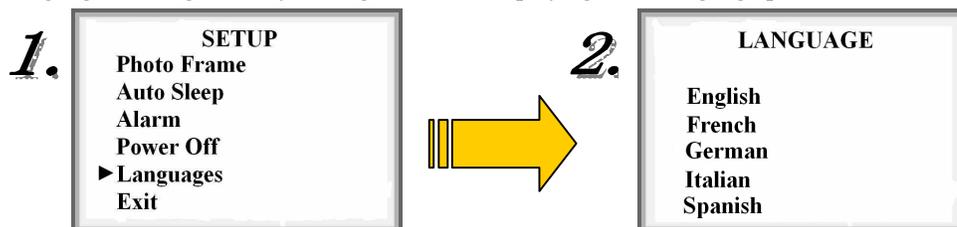

Notes:

English is the default language of Digital Frame

V. Photo Management

Digital Frame Driver is a tool required to import photos to display on your Digital Frame. Please install and run this software to transfer images from your computer to Digital Frame after connecting it to PC


Connect to PC

1. Connect the Digital Frame to PC via the USB connection cable as shown

A new icon would appear on the task tray




2. Select "USB Update" on your Digital Frame

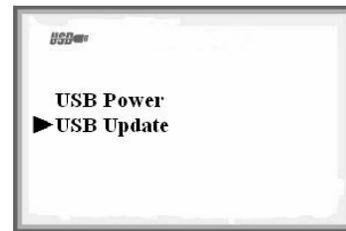


Software Installation

Insert and run CD provided on your computer CD-ROM. Click "Install Digital frame Driver"; then follow the on-screen instructions to complete the installation:

Step 1: Click "I Agree"

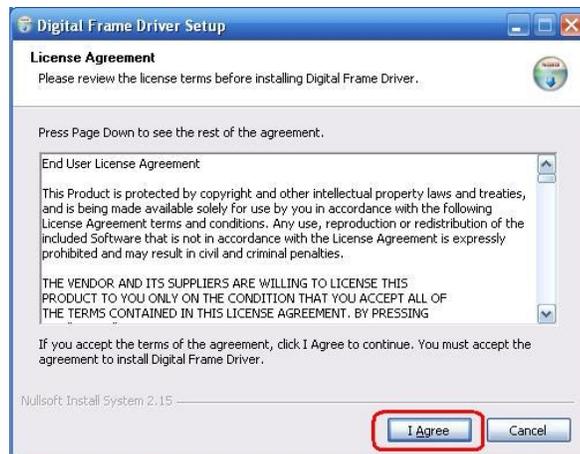

**Step 2: Select “Destination folder”;
then click “Next”**

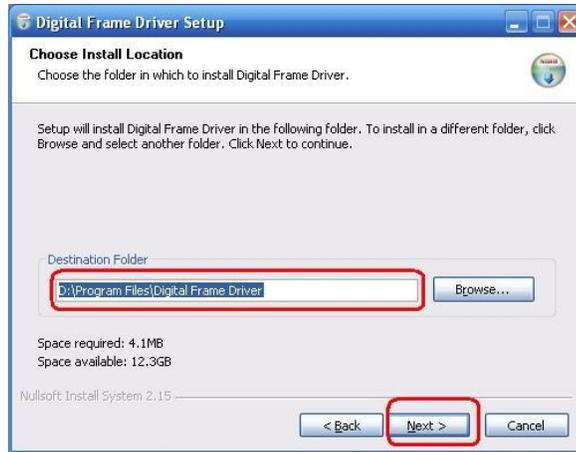

Step 3: Click “Install”



**Step 4: Click “Close” to finish
installation**



Run Digital Frame Driver

Please right click  icon in task tray and choose “My Digital Frame” to access photo management interface as shown:



Refresh

Refresh: Update photos in your Digital Frame



Add

Add: Add new photo to preview and edit



Save

Save: Save the photos to Digital Frame after deletion or edit



Delete

Delete: Delete selected photos from Digital Frame



Delete All

Delete All: Delete all photos from Digital Frame



Close

Close: Exit photo management

NOTE:

- ① Do not attempt to access Digital Frame on the computer directly as a removable disk. It is only accessible via the Digital Frame Driver.
- ② Before starting Digital Frame Driver, make sure to connect Digital Frame to your computer via the USB cable.

Ø Downloading Photo onto Photo Frame

Step 1: Click  to select images to be converted



Step 2: Preview and edit Photo



Rotate -90: Rotate the image 90° counter-clockwise



Rotate 90: Rotate the image 90° clockwise.



Add: Click to finish edit



Cancel: Cancel editing and previewing photo

Step 3: Click  button to finish editing

Step 4: Add another photo by repeating “step 1” to “step 3”

Step 5: Click  button to finish downloading

Note:

- ① Digital Frame will display “Write OK” when complete downloading.
- ② Take care not to pull out USB cable during downloading

Ø Deleting Photo from Photo Frame

Step 1: Select photo to be deleted

Use “Ctrl + Click” or “Shift + Click” to select multiple photos

Step 2: Click  **button to delete selected photo**

Step3: Click  **to delete all the photos**

Step 4: Click  **button to finish deletion**

Note:

- ① Digital Frame will display “Write OK” when complete downloading and deletion
- ② Take care not to pull out USB cable during downloading and deletion

Disconnect Digital Frame from PC

Your Photo Frame is a Mass Storage device. In order to successfully remove your Photo Frame device please don't disconnect the USB cable directly, this may result in the photos not being displayed in the Photo Frame.

1. Double click the “Safely Remove Hardware”  icon that appears on the Task tray
2. Select the “Safely Remove Hardware” pop-up that appears.
3. The “Safely Remove Hardware” message box will appear.
4. Select the “USB Mass Storage Device” from the list of devices that appear.
5. Click the “Stop” button.
6. Please wait until Windows notifies you that it is now safe to unplug the device from your computer.

VI. Weather Report & Online Album & Events Reminder

This Internet-enabled Digital Frame goes beyond showing just pictures in it. It allows you to enjoy your online album, updated weather report and Google Calendar events reminder when Internet is accessible. Furthermore, you can employ it as your “second screen” to display photos in a selected folder on PC directly.

Weather Report


1. Connect the Digital Frame to PC and run Digital Frame Driver

2. Set weather report


Step 1: Right click  icon in task tray and choose "Options"




Step 2: Select "Weather Forecast"

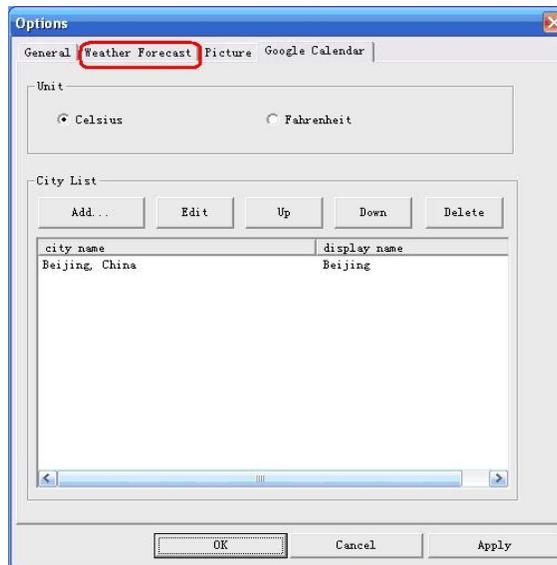


Step 3: Click "Add" to search and add cities

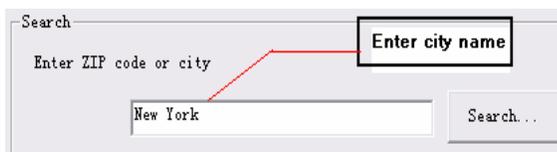

Step 4: Select city and click "OK" to finish city search

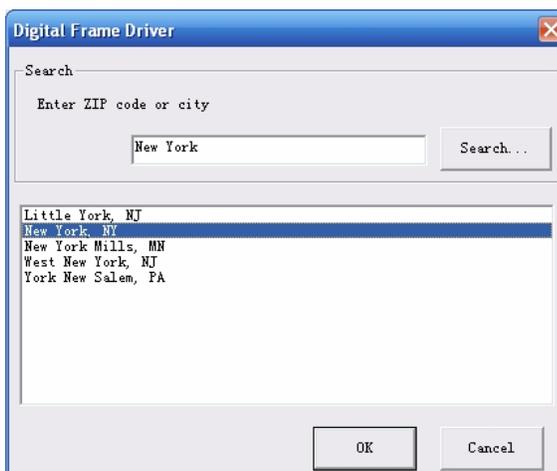

Step 5: Click “OK” button to finish weather report setting

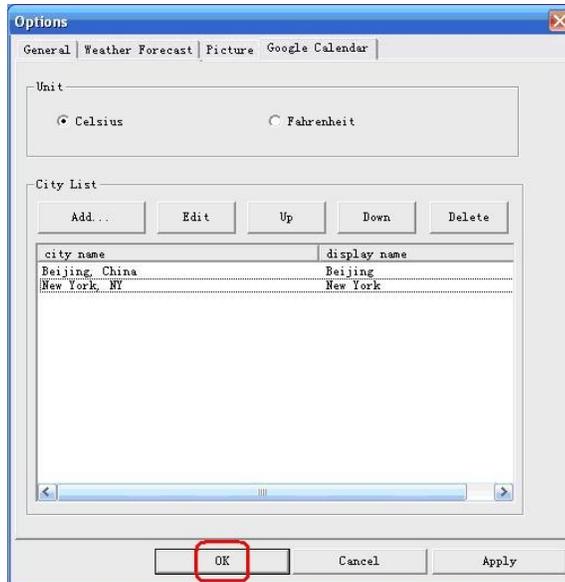

: Edit the city’s name displayed on Digital Frame




: Change selected city’s sequence when displaying weather report on Digital Frame.



: Delete selected city

3. Display weather report on Digital Frame

① Right-click  icon, choose “Slide Show” and select “Weather Report”

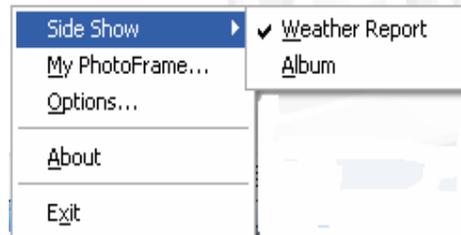

② Weather report would be show on Digital Frame




Online Album Slideshow

1. Connect Digital Frame and run Digital Frame Driver


2. Set online album show

Step 1: Right-click  icon in task tray and choose "Options"

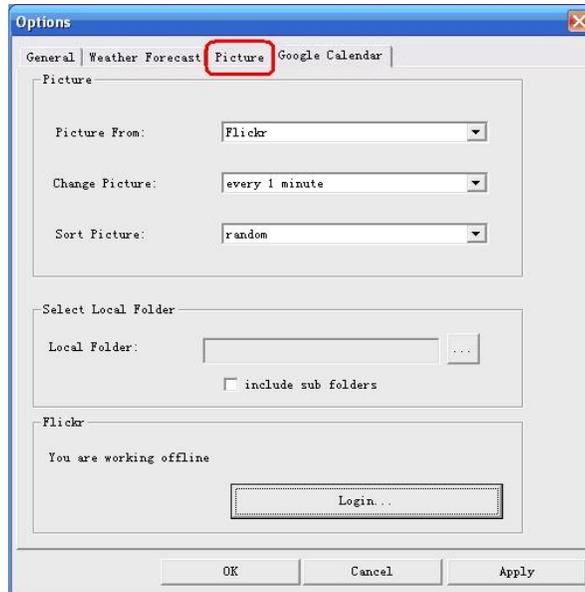


Step 2: Select "Picture" in "Option" panel


Step 3: Select Flickr as photos resource

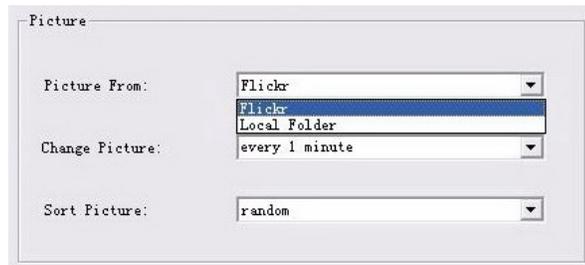



Step 4: Choose interval time between pictures transition

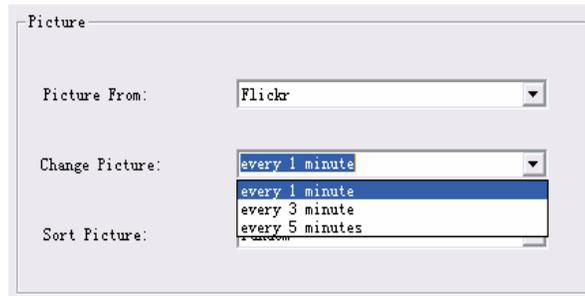


Step 5: Choose the way to display photos

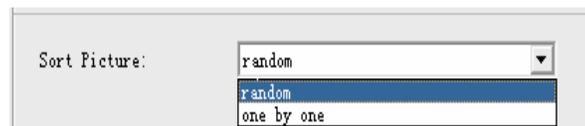


Step 6: Click “Log in” to link to Flickr for sign in

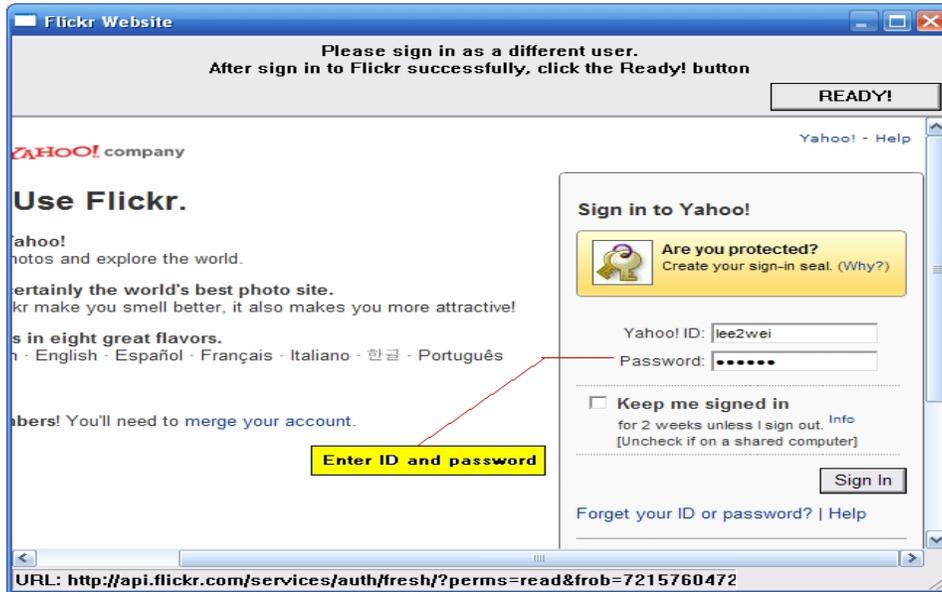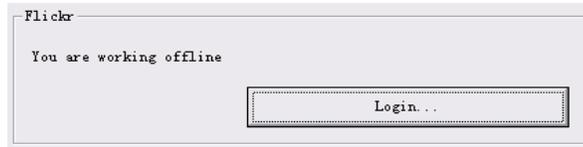

Step 7: Click “READY” to finish Flickr setting

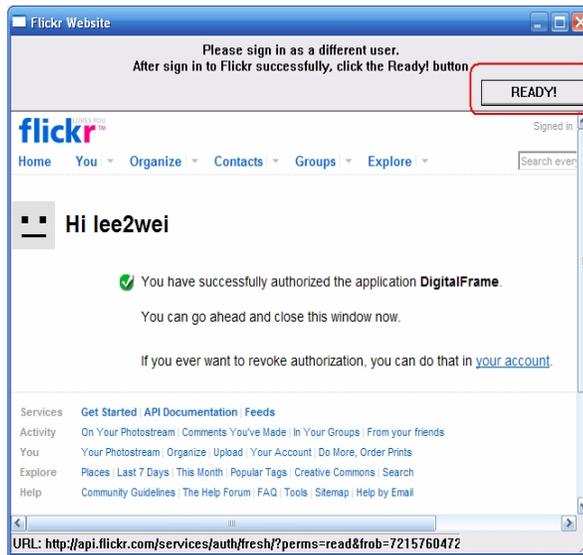

Step 8: Right-click  icon, choose “Slide Show” and select “Album”

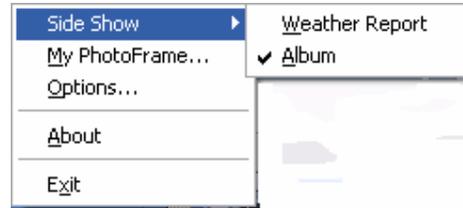

After finishing all above settings, the Internet-enabled Digital Frame would direct display your or your friends’ online album in Flickr on its LCD one minute later. Furthermore, it would auto display online album without visiting and signing in to Flickr when it connecting to PC and running Digital Frame Driver.

Direct Show Photos on Your PC

1. Right-click  icon, choose “Options” and go to “Picture” panel

2. Choose “Local Folder” as photo recourse




3. Choose interval time between picture transitions (refer to Online Album Slideshow)

4. Choose the way to display photos (refer to Online Album Slideshow)

5. Locate folder where photos are




6. Click “OK” to finish setting; then right click , choose “Slide Show” and select “Album”

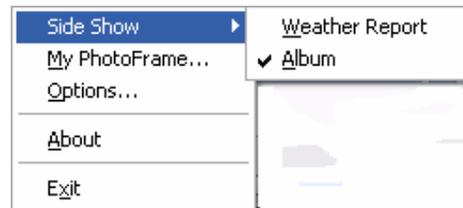

Then the Digital Frame would direct show any picture in selected folder without opening the folder. It could also display pictures as many as you want.


Google Calendar Events Reminder

1. Create Google Calendar account. Please click [here](#) to sign in or sign up to Google Calendar
2. Create your events in Google Calendar

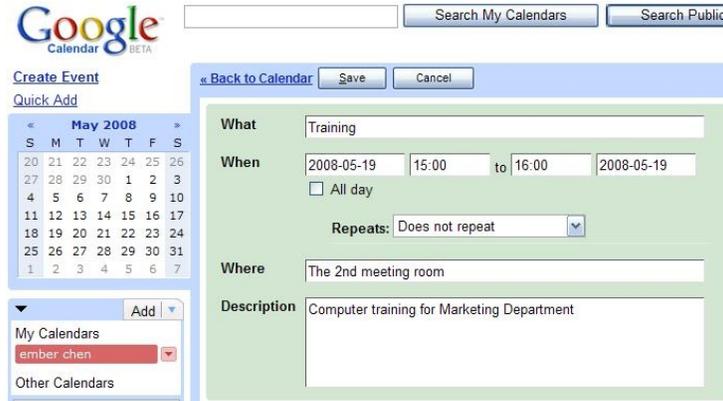

3. Set Google Calendar events reminder in Digital Frame Driver

Step 1: Right-click  icon, choose "Options" and go to "Google Calendar" panel

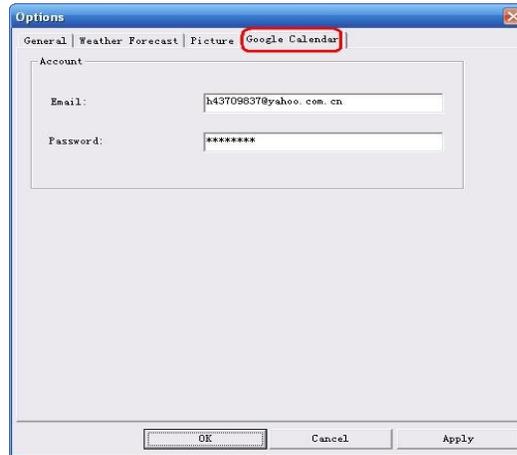

Step 2: Enter your Google Calendar ID and password



Step 3: Click "Apply" and "OK" to finish setting

Then the Digital Frame would synchronize your schedules with Google Calendar. And it would remind you of important events by buzz and notification.



Note:

- ① Stop alarm by pressing **M**
- ② It's recommended to refer to Google Calendar webpage for the guide of Google Calendar.

VII. FAQ

Q1: Why did I see the  icon rather than  in the taskbar?

Check whether the Digital Frame fail to connect to your PC. Please ensure the connection between PC and the Digital Frame when running Digital Frame Driver.

Q2: Why the photos displayed are distortion?

Those picture files are bad. Please do NOT pull the USB cable during downloading or deleting pictures.

Q3: Why the Digital Frame turn off suddenly?

- a) Auto sleep function is activated. Please disable the auto sleep by select "Off" in Auto Sleep setting.
- b) The battery is out. Please charge the battery by USB supply.

Q4: Why the alarm does not work

- a) The alarm was canceled. Please ensure that the  icon was appeared during setting alarm.
- b) The Power Switch has been turned to "Off", which would initialize the Digital Frame to default setting. It is strongly recommended to turn off Digital Frame by warm close-down. (refer to "Turn On / Off")